

fuse

DB nr of pieces 126 545 21 00

nr

☐ 8A (white)

○ 16A (red)

- 25A (blue)

■ 30A

fuse

nr

1	☐ (auxiliary fan)	low beam left	☐ 12
2	☐ diagnostic term, 6 hazard warning system, clock, front roof light (electronic radio, vanity mirror light, relay comfort circuitry term. 86, electr. illum. control)	high beam right, high beam indicator	☐ 13
3	☒ heated rear window	high beam left	☐ 14
4	☐ low beam right	roof light rear, trunk light, safety belt handover arm, switch over valve seat back arrester (central locking system, door lights, reading lamps/rear compartm., aut. antenna, control unit seat adjustment memory)	☐ 15
5	☐ back-up lamp, heating water valves, water pump, climate control system (relay auxiliary fan term. 86, aut transmission electrics, blower motor inside temperature sensor, air condition compressor electromagn. clutch/valve air injection)	blower motor	☒ 16
6	☐ stop lamp. instrument' front roof light, electric bulb control unit (cruise control, tachometer, hydropneumatic suspension)	wipe/wash system, optical horn, (relay headlamp cleaning unit term. 86, relay comfort circuitry term. 86)	☐ 17
7	☐ turn signal lamp, horn (outside temperature gauge)	heating system for washer jets, cigar lighter, glove compartment light switch heated rear window (radio)	☐ 18
8	☐ safety belt handover arm (adjustable heated outside mirrors, rear cigar lighter, rear seat heating)	(sliding roof, front seat heating, ortho. back rest)	☐ 19
9	☐ parking/tail light left	(front seat adjustment, jacket tube adjustment-memory)	☒ A
10	☐ fog light, rear fog light	(front seat adjustment, jacket tube adjustment)	☒ B
11	☐ parking/tail light right, warning buzzer, illumination: license plate, instrument, control elements (headlamp cleaning unit)	(window lift front left a. rear right, rear seat bench adjustm. resp. rear single seat adjustm. left)	☒ C
		(window lift front right a. rear left, rear single seat adjustm. right)	☒ D

fuse blower motor outside fuse box/ automatic climate control

fuse arrangement

			1	2		3				
A	B	4	5	6	7	8	9	10	11	
C	D	12	13	14	15	16	17	18	19	

direction of travel